



# 4-in-1 universal keyboard with touchpad, function and special keys

## 1. Layouts


German:

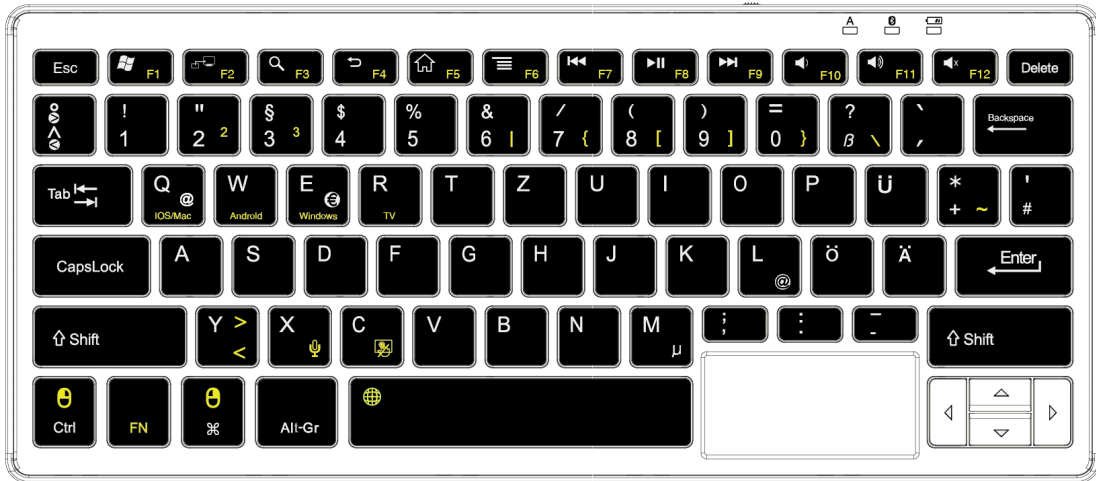

English (UK):

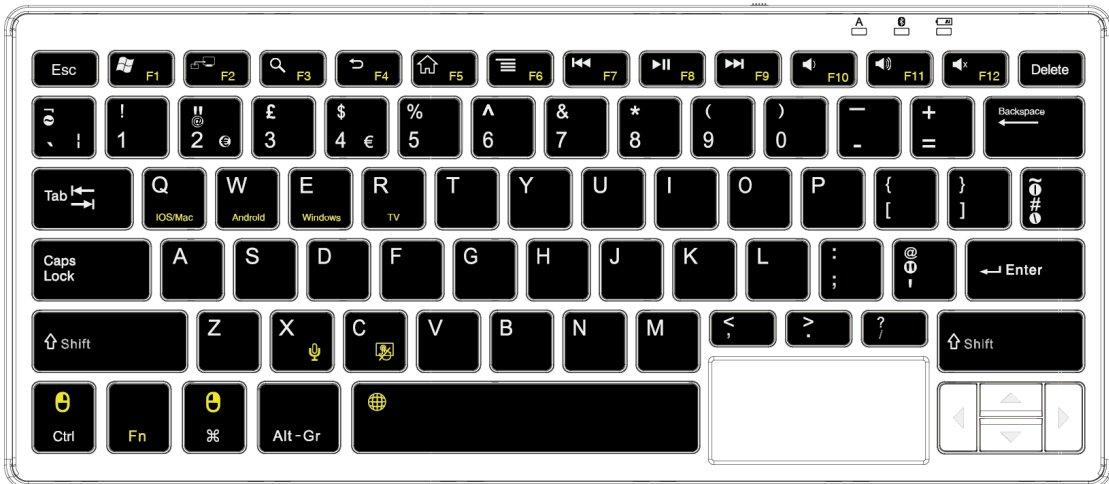

French:

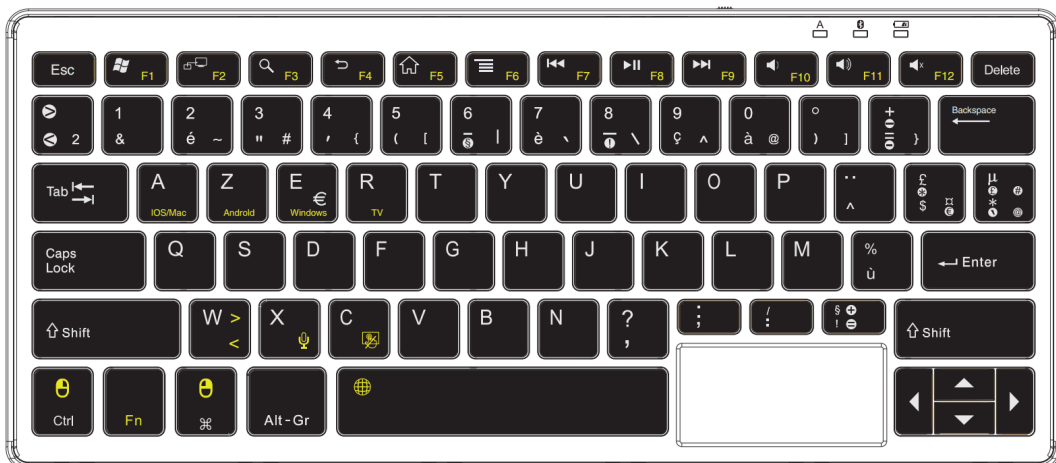










## 2. Special Functions / Special Keys:

Please note: Empty fields mean there is no function for the key or key combination.

	iOS	Mac OS	Android	Windows	TV
			back	back	back
				start menu	
			music player	screen settings / external screen	music player
	search function	search function	search function	search function	search function
			back	back	back
	home	home	home	home	home
			menu "settings"	right click:	menu "settings"
	last track	last track	last track	last track	last track
	play / pause	play / pause	play / pause	play / pause	play / pause
	next track	next track	next track	next track	next track
	volume: down	volume: down	volume: down	volume: down	volume: down
	volume: up	volume: up	volume: up	volume: up	volume: up
	mute	mute	mute	mute	mute
Note:	     have no function in iOS / OS X				

## 3. FN key combinations

Please note: Empty fields mean there is no function for the key or key combination.














	iOS	Mac OS	Android	Windows	TV
<b>FN+</b> 	Change to iOS keyboard	Change to OS X keyboard			
<b>FN+</b> 			Change to Android keyboard		
<b>FN+</b> 				Change to Windows keyboard	
<b>FN+</b> 					Change to TV keyboard
<b>FN+</b> 	change input language	change input language	change input language	change input language	change input language
<b>FN+</b> 		left mouse click	left mouse click	left mouse click	left mouse click
<b>FN+</b> 		right mouse click	right mouse click	right mouse click	right mouse click
<b>FN+</b> 			language input	language input	language input
<b>FN+</b> 		switch touchpad on / off	switch touchpad on / off	switch touchpad on / off	switch touchpad on / off
Note:	The touchpad has no function under iOS.				

#### 4. Function keys F1~F12 in Windows

	Windows
<b>FN+F1</b>	help
<b>FN+F2</b>	change name
<b>FN+F3</b>	activate search
<b>FN+F4</b>	open internet explorer
<b>FN+F5</b>	refresh

<b>FN+F6</b>	Internet Explorer: go to address field
<b>FN+F7</b>	no function
<b>FN+F8</b>	no function
<b>FN+F9</b>	no function
<b>FN+F10</b>	activate screen lock (if existent)
<b>FN+F11</b>	zoom in
<b>FN+F12</b>	no function

## 5. Further functions

	iOS	Mac OS	Android	Windows	TV
choose all	 + <b>A</b>	 + <b>A</b>	<b>Ctrl</b> + <b>A</b>	<b>Ctrl</b> + <b>A</b>	<b>Ctrl</b> + <b>A</b>
copy	 + <b>C</b>	 + <b>C</b>	<b>Ctrl</b> + <b>C</b>	<b>Ctrl</b> + <b>C</b>	<b>Ctrl</b> + <b>C</b>
cut	 + <b>X</b>	 + <b>X</b>	<b>Ctrl</b> + <b>X</b>	<b>Ctrl</b> + <b>X</b>	<b>Ctrl</b> + <b>X</b>
paste	 + <b>V</b>	 + <b>V</b>	<b>Ctrl</b> + <b>V</b>	<b>Ctrl</b> + <b>V</b>	<b>Ctrl</b> + <b>V</b>
undo	 + <b>Z</b>	 + <b>Z</b>	<b>Ctrl</b> + <b>Z</b>	<b>Ctrl</b> + <b>Z</b>	<b>Ctrl</b> + <b>Z</b>
Note:	   Special keys Mac OS X / iOS				