

Manual


Bluetooth-TWS-Headset



Produktnummer: **EP18174+EP18175**
EP21501+EP21500

PACKAGE CONTENT

Before attempting to use the device read the instructions carefully and make sure the following objects are included in the packaging

Pieces	Accessory	Note
1	Wireless headset	Integrated battery
1	Charging cable	-
1	Manual	 Scan this QR code and you will be able to download the Manual.
1	Charging station	-

TECHNICAL DETAILS

Data connection	Bluetooth 5.0
Frequency range	2.402 GHz - 2.480 GHz
Frequency	UHF
Max. transmission	2,92 mW
Transmission range	10 m
Run time	up to 10 h
Stand-by time	up to 100 h
Charging time	ca. 2 h

FUNCTION

Switching on:

The headphones turn on automatically when they are removed from the charging case.

Pairing:

When you remove the earphones from the charger case, the unit will automatically turn on and switch to TWS pairing mode (if not, please reset the headphones).

The earphones will pair automatically. Then search and select "LEICKE EP18174", "LEICKE EP18175", „LEICKE EP21501“ or „LEICKE EP21500“ in the Bluetooth menu of your phone.

Multipoint pairing with multiple devices:

Pair the headphones with device 1 first, then turn off the Bluetooth of the device. Now pair with device 2 and then turn on the Bluetooth on device 1 again.

Incoming call:

Briefly tap the R/L touch sensor to answer/hang up the call. Long tap the R/L touch sensor to decline the call.

Voice Assistant:

1. Press the R/L touch sensor for 2 seconds to access the Siri/Google assistant.
2. Voice wake-up is supported by saying "Hey, Siri!"

Volume control:

You can reduce the volume by tapping the left touch sensor three times. Increase the volume by touching the right touch sensor three times.

Music control:

Briefly tap the R/L touch sensor to play or pause music. Double tap the left touch sensor to switch to the previous track. Double tap the right touch sensor to move to the next song.

Low-battery warning:

When the battery is low, the "Low-Battery" alarm sounds and the blue LED


lights up, then the headset switches to standby mode.

Headset charging:

Plug the headphones into the base, please press the button of the base, the headphones are charged, the blue LED is always on. When the battery is fully charged, the LED of the headphones flashes blue and then goes out.

Charging the base:

Charge the base using the iOS cable. Wireless Charging is supported. When the base is charged, the red LED flash. When the battery is fully charged, the red LED indicator continue to light up.

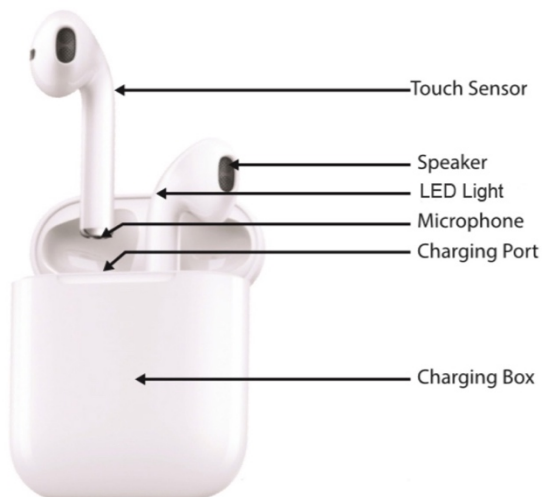

SAFETY NOTES

For your own safety and for long enjoyment of our product, please follow the following safety instructions:

- Please use device as described in the manual.
- Please keep the device dry and use in dry environment only. Do not touch with wet hands.
- Keep away from damp, high temperature, dusty, erosive and oxidative environment.
- Do not open cover and do not touch inner parts.

DISPOSAL

This device contains materials that must not be disposed of as household waste. Please check local laws concerning the applicable disposal regulations. Protect the environment by participating in recycling programs.



DECLARATION OF CONFORMITY

LEICKE GmbH herewith declares that the devices EP18174, EP18175, EP21501, EP21500 comply with the RED 2014/53/EU and ROHS 2011/65/EC Annex II 2015/863 as last amended by Directive (EU) 2017/2102 regulations. The declaration of conformity can be found at: www.leicke.eu/de/products/XXXXX



XXXXX is EP18174, EP18175, EP21501 or EP21500.

CONTACT

Please contact us in case of questions!

PRODUCTION & DISTRIBUTION

LEICKE GmbH
Stöhrerstraße 17
04347 Leipzig
GERMANY

Web: www.leicke.com
Mail: info@leicke.com

