



# User's Manual

## LEICKE Music Beanie for smartphones with Bluetooth



Product number: **WD67221 + WD67223 + WD67224**  
**WD67228 + WD67229 + WD67230**

## PACKAGE CONTENTS

Before attempting to use this device, please check the packaging and make sure the following items are contained in the package:

Number of Pieces	Name	Note
1	Music Beanie	Bluetooth 2.1+EDR
1	Micro USB cable	micro USB
1	User's Manual	-

## TECHNICAL DETAILS


Input voltage	Micro USB, 5V
Input current	120mA
Weight	ca. 110g
Data connection	Bluetooth 2.1 + EDR
Radio spectrum	Ultra High Frequency
Max. Transmitter power output	2.92 mW
Transmission distance	about 6 m
Battery	4.2V/130mAh, Li-ion
Battery run time	Stand-by: 60 h Operating: up to 4 h
Charging Time	about 1h
Operating Temperature	0°C~40°C
Dimensions	unysize



Built-in Microphone



Compatible with iPhone  
and Android Devices

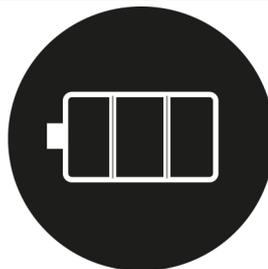

Li-ion Battery



Bluetooth 2.1 + EDR

## PRODUCT INFORMATION

Make telephone calls or listen to music from your smartphone with our music beanie without giving up the cozy warmth on your ears. The beanie works with Bluetooth 2.1. Taking out all electrical parts you can wash the beanie (cold handwash only). It is compatible with all Bluetooth devices and can be charged via micro USB.

## CHARGING

See washing instructions on how to remove the control unit to charge.

Connect the control unit via micro USB to a suitable device (e.g. notebook). During the charging process a red LED will glow. It stops glowing once charging is complete.

**Note:** The micro USB connector is just for charging, not for data transmission.

**Safety note:** Batteries mustn't be exposed to extreme temperatures.

## CONNECTING TO THE SMARTPHONE


**Step 1:** Press the Play/Pause button at least 5 seconds until the LED flashes alternately blue and red. Now the device can be found and added by your smartphone or tablet.

**Step 2:** Switch on smartphone or tablet, search at Bluetooth for music beanie or Bluetooth headware and choose "connect".

**Step 3:** If successfully connected the blue LED will glow alone.

*Once a connection was successfully established you don't need to pair them again.*

## FUNCTIONS

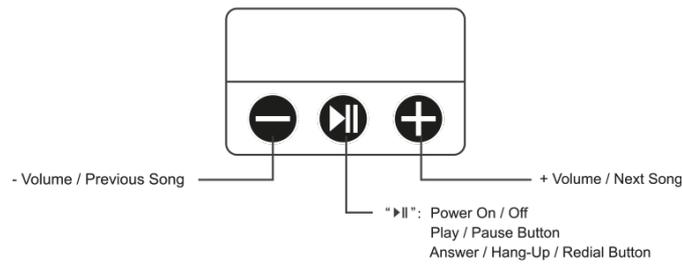

**Calls:** Press the Play/Pause button once to take a call or hang up.

**Music:** Switch on or off the music with the Play/Pause button.

Shortly press "-" button: backward.

Shortly press "+" button: forward.

**Volume control:** Long press "-"-button: volume up. Reaching maximum volume you will hear a short ringing tone.

Long press "+" button: volume down. Reaching minimum volume you will hear a short ringing tone.





## WASHING INSTRUCTIONS

**Please note!** Both speakers must be removed before washing!

**Step 1:** Control unit and speaker are located in two pockets at the bottom rim of the beanie. You can push them gently out of those pockets.

**Step 2:** At the beanie's back there is an opening on the inner side. Just push both parts towards this hole and then take them out.

**Step 3:** Now you can wash the beanie cold. Do not tumble dry. Then insert both speakers the same way you took them out.

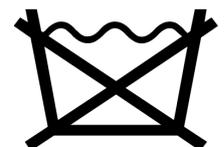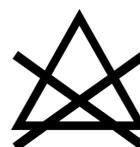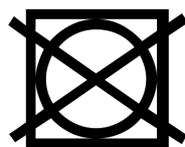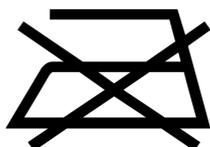

## **SAFETY NOTES**

- Keep the device away from humidity or liquids while charging. This may lead to short-circuit.
- Do not manipulate the device. For example: Do not disassemble, open, crush, stab, microwave, incinerate or paint the device. Do not insert unsuitable objects.
- Do not use abrasive cleaners to clean the device.
- Do not expose the device to extreme temperatures (heat/cold).
- Avoid open fire, like cooking fires, candles or bonfires.
- Sharp objects may leave scratches or even damage the tracker.
- Do not attempt to repair the device, modify or disassemble. It does not contain any parts useful.

## **BATTERY NOTICE**

- Do not attempt to change the battery. It is built-in and not made for change.
- Just charge the battery as described in the manual.
- Avoid extreme high or low temperatures while charging.
- Do not try to disassemble and open the battery by force.
- Do not expose to open fire. The battery could explode which could lead to injuries or death.

## FCC Interference Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules.

These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one of the following measures: - Reorient or relocate the receiving antenna. - Increase the separation between the equipment and receiver. - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. - Consult the dealer or an experienced radio/TV technician for help.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

1. This device may not cause harmful interference, and
2. (2) this device must accept any interference received, including interference that may cause undesired operation.

FCC-Caution: FCC Caution: Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

### IMPORTANT NOTE:

#### Radiation Exposure Statement:

1. This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. End users should follow the specific instructions in the user's manual to comply with the FCC rules.
2. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

## DISPOSAL



This device contains materials that must not be disposed of as household waste. Please check local laws concerning the applicable disposal regulations. Protect the environment by participating in recycling programs!

## DECLARATION OF CONFORMITY

LEICKE GmbH herewith declares that the device complies with the RED 2014/53/EU, RoHS 2011/65/EG regulations. The declaration of conformity can be found at [www.leicke.com](http://www.leicke.com). Go to the product you bought and look at downloads.

**RoHS** 

## CONTACT

**If you have any questions, please feel free to contact us.**

### PRODUCTION & WHOLESALE

**LEICKE GmbH**

Dohnanystr. 28

04103 Leipzig

Germany

**Web: [www.leicke.com](http://www.leicke.com)**

**Mail: [info@leicke.com](mailto:info@leicke.com)**