

Manual LEICKE Sharon

4 in 1 Bluetooth Keyboard with integrated Touchpad
For PCs and Tablets with iOS, Android, Windows and smart TVs



Product number: SI54236

Thank you for purchasing the Bluetooth Keyboard with Touchpad from Sharon.

We hold several brands to produce and distribute our products: **LEICKE** (power adapters, batteries), **KanaaN** (adapters/converters, charging cables etc.), **Sharon** (Tablet cases with keyboard, trackpads etc.), **HEBRON** (protective cases, docking stations, screen protectors etc.), **MANNA** (notebook cases, tablet cases).

We continuously work on the development of our products, our customer support and innovations. Our products have a long service life, are eco-friendly and high performing. Furthermore, every day we do our very best to satisfy you as our customer. That is why you, no matter if private or business customer, are in the focus of our company's efforts. We take your reviews and proposals seriously and evaluate them continuously. That way, we get to know you and your demands on our products and services better and thus allow for positive enhancements.

To discover more about LEICKE products or if you have any questions about this product visit our website www.leicke.com.

PACKAGE CONTENTS

Before attempting to use this device, please check the packaging and make sure the following items are contained in the package:

Number of Pieces	Name	Note
1	Bluetooth keyboard	Touchpad integrated
1	USB charging cable	USB type A to Micro USB
1	User's Manual	universal

PRODUCT INFORMATION

- Wireless Bluetooth 3.0 keyboard
- Integrated touchpad with scroll function
- Range up to 10 m
- Built-in rechargeable lithium battery
- Special function keys (depending on model and operating system)
- Lightweight, with silent key strokes, ergonomic design
- Energy saving sleep mode after 10 minutes of inactivity

ENERGY SAVING SLEEP MODE

The keyboard will change into sleep mode when it is inactive for 10 minutes. To activate from sleep mode, just press any key and wait 3 seconds. The keyboard will come back on. The touchpad can be used with activated keyboard only.

KEYBOARD DETAILS

Interface	Bluetooth 3.0
Operating distance	up to 10 m
Frequency modulation	GFSK
Operating voltage	3.0-5.0 V
Working current	4 ~ 6mA
Sleeping current	< 20 ~ 50nA
Charging current	~ 300 mA
Charging time	2-3 h
Lithium battery capacity	370 mAh
Uninterrupted working time	~ 50 h (touchpad + keyboard)
Key strength	80 g ± 10 g
Weight	270 g

Operating Temperature	-20°C to 40°C
Allowed Relative Humidity	10% - 90%

CONNECTING THE BLUETOOTH KEYBOARD

Note: Please charge the keyboard with the included USB cable before connecting it.

Step 1: Switch the keyboard on. The power switch is to the side, left of the connect button. The Bluetooth LED will flash once.

Step 2: Press the connect button (left of status LED). The Bluetooth LED will flash and the device is ready for connection. The keyboard is now ready for connection with the tablet or smartphone.

Step 3: Switch on you tablet, PC or smart TV and go to the system / settings menu.

Step 4: Choose "Bluetooth". If switched off, activate it. If Bluetooth is active the menu will display "Bluetooth keyboard". Choose this device.

Step 5: The tablet will now display a code to connect. Insert the code via the keyboard and confirm with the Return key. The connection will now be securely encoded.

Step 6: The LEICKE keyboard is now connected successfully to the device. Once successfully connected, the keyboard saves all connection data until connected to another device.

Step 7: Select an appropriate keyboard layout for your device. For example, press the FN + W key to enable maximum compatibility with Android. The possibilities are printed very small on the Q, W, E and R keys.

Now you can use touchpad and keyboard with your tablet or smartphone.

Further devices: Of course, the keyboard can be connected to other smartphones, tablets or PCs using Bluetooth. You are not limited to just one single type of device when using the keyboards functions.

Language: To set the keyboard layout you choose in "Settings / Language and Input" gear icon behind "Samsung keyboard" and then "Input Languages". Remove the check mark behind "language system" in order to use different keyboard layouts with the Bluetooth keyboard. Some devices may have different menus! In this case, the settings can be found under the menu item "Language and Input" and "Physical keyboard". Therefore, the producer's manual may hold some important information.

CHARGING THE INTEGRATED BATTERY

When the battery power is low, the battery indicator light will flash. It is time to recharge the keyboard.

Step 1: Connect the USB charging cable with the micro USB plug to the keyboard's charging interface.

Step 2: Connect USB-A to a power adapter or computer's USB interface. The charge indicator light will stay on during the charging process.

TOUCHPAD

To allow you a PC-like feeling when working with your tablet, our LEICKE keyboard has an integrated high quality touchpad. For a mouse click just tap on the touchpad or use FN+CTRL (left mouse button) or FN+Alt ⌘ (right mouse button). Additionally, there is an especially highlighted scroll area on the touchpad, which allows you to scroll through long documents or websites.

SPECIAL FUNCTION KEYS

Some keys have special functions like media control, speech input or changing the keyboard layout according to the symbols. In order to use them correctly, use the FN key and the key with the according operating system to configure the keyboard. Functions and special signs, which are used with the FN key, are highlighted with yellow.

Just have a look at the special keys flyer to get an overview on the main key combinations.

You may use these functions by pressing the FN key and the desired function simultaneously. Please note: not all tablet types have the same functions and features like speech input etc. may not be supported by your tablet.

Please note, that the layout is configured for the use with iOS, OSX, Android, Windows or smart TV. If you are using this keyboard with tablets from other producers, functions or keys like e.g. the @-key, may not be usable. In this case please use the screen keyboard.

SAFETY NOTES

Please avoid the following situations:

- Keep away from sharp objects, oil, chemicals or any other organic liquids.
- Do not place heavy objects on top of the keyboard.
- Avoid open fire and high temperatures.
- Do not microwave or put into direct sunlight.

CLEANING

Clean the keyboard with a moist cloth and water or a mild soap solution.

TROUBLE SHOOTING

We arranged the following questions and answers for you to find the cause and solve the problem.

Problem	Possible Cause/Possible Solution
Unable to connect	<ol style="list-style-type: none">1. Make sure the keyboard is switched on.2. Make sure the keyboard is within the operating distance.3. Check the battery's charging state.4. Check if your tablet supports bluetooth and that bluetooth is activated.5. Check if your device recognized the keyboard.6. In case nothing helps, try to delete and then connect the keyboard again.
Unable to charge keyboard	<ol style="list-style-type: none">1. Make sure the USB power cable is connected properly to the keyboard and the power source.2. Check if the power adapter is compatible.
Layout of the keyboard does not match	Make sure the language settings are correct. The settings of the keyboard's language can be found under "Language and Input". Different layouts maybe supported in a single country profile. The correct layout can be set under "keyboard and input modes".
Touchpad is not working	Please keep in mind, that humidity may affect the touchpads

Problem	Possible Cause/Possible Solution
correctly.	function temporarily. Therefore, please don't use the touchpad with wet hands to avoid errors.
Delayed function of keyboard (characters appear very slowly on the display after typing)	To fasten the transmission from keyboard to tablet if needed, switch off the touchpad with FN + C . To switch it back on use the same key combination.

If you have any questions, don't hesitate to contact our support team. It will be a pleasure to help you and solve your problems!

iPad, iPad2, New iPad, iPhone, iPodTouch are registered trademarks of Apple Inc, Galaxy Note and Galaxy Tab are a registered trademark of Samsung. Windows is a registered name of the Microsoft Corporation.

FCC Interference Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules.

These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one of the following measures: - Reorient or relocate the receiving antenna. - Increase the separation between the equipment and receiver. - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. - Consult the dealer or an experienced radio/TV technician for help.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following conditions:

1. This device may not cause harmful interference, and
2. this device must accept any interference received, including interference that may cause undesired operation.

FCC-Caution: FCC Caution: Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

IMPORTANT NOTE:


Radiation Exposure Statement:

1. This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. End users should follow the specific instructions in the user's manual to comply with

the FCC rules.

2. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

DISPOSAL

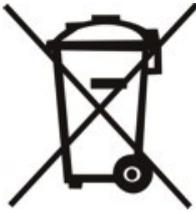

This device contains materials that must not be disposed of as household waste. Please check local laws concerning the applicable disposal regulations. Protect the environment by participating in recycling programs!

CONTACT

If you have any questions, please feel free to contact us.

LEICKE GmbH
Dohnanystr. 28
04103 Leipzig
Germany

Web: www.leicke.com

Mail: info@leicke.com

