 



4-in-1 universal keyboard with touchpad, function and special keys

1. Layouts


German:

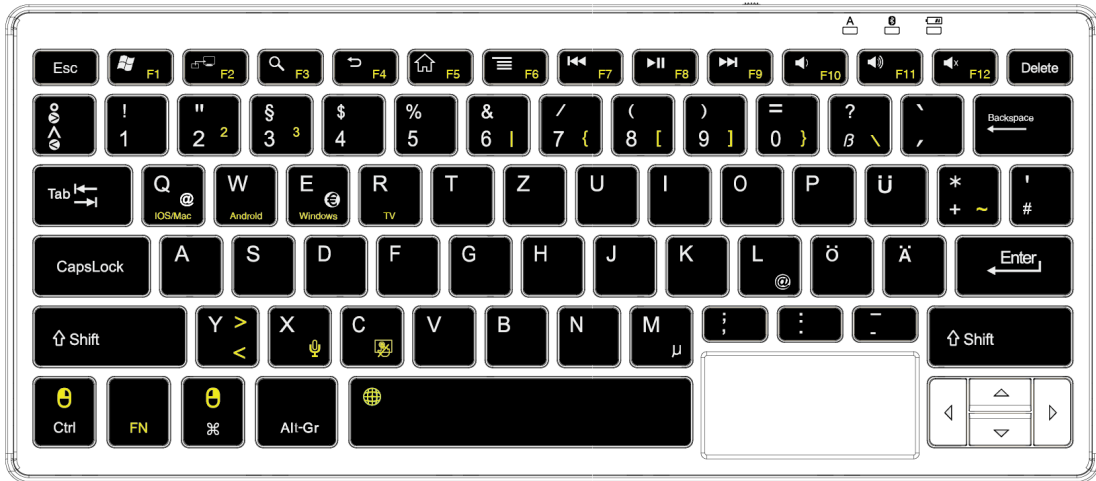

 English (UK):

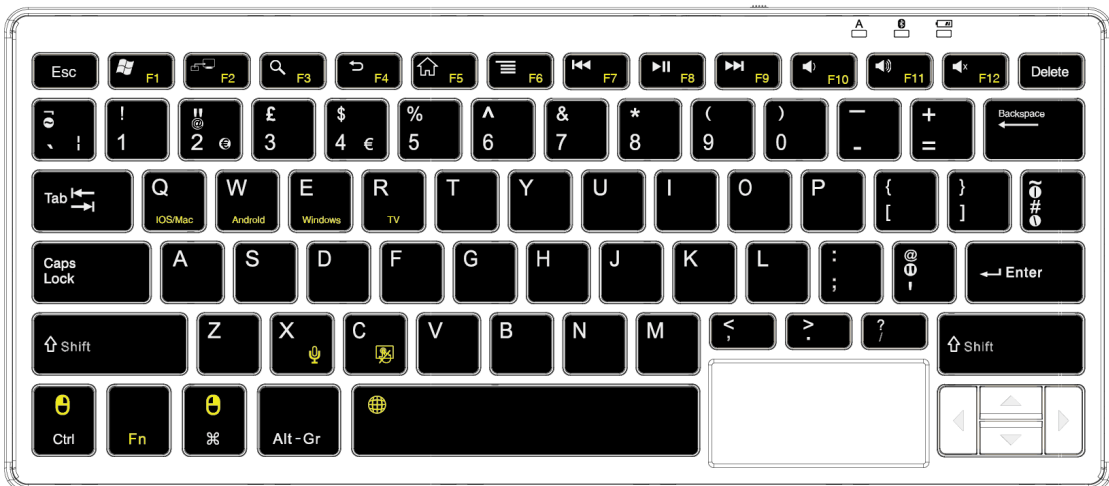

French:

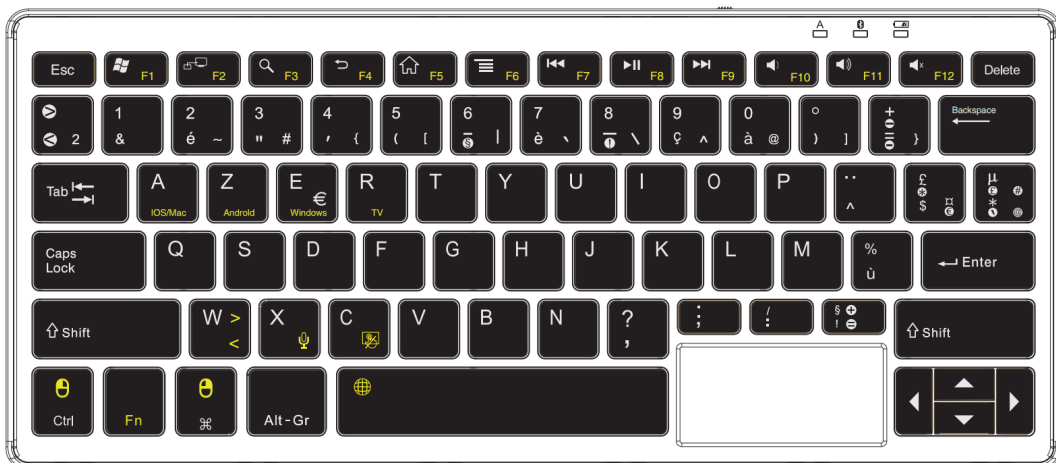 










2. Special Functions / Special Keys:

Please note: Empty fields mean there is no function for the key or key combination.

	iOS	Mac OS	Android	Windows	TV
			back	back	back
				start menu	
			music player	screen settings / external screen	music player
	search function	search function	search function	search function	search function
			back	back	back
	home	home	home	home	home
			menu "settings"	right click:	menu "settings"
	last track	last track	last track	last track	last track
	play / pause	play / pause	play / pause	play / pause	play / pause
	next track	next track	next track	next track	next track
	volume: down	volume: down	volume: down	volume: down	volume: down
	volume: up	volume: up	volume: up	volume: up	volume: up
	mute	mute	mute	mute	mute
Note:	     have no function in iOS / OS X				

3. FN key combinations

Please note: Empty fields mean there is no function for the key or key combination.














	iOS	Mac OS	Android	Windows	TV
FN+ 	Change to iOS keyboard	Change to OS X keyboard			
FN+ 			Change to Android keyboard		
FN+ 				Change to Windows keyboard	
FN+ 					Change to TV keyboard
FN+ 	change input language	change input language	change input language	change input language	change input language
FN+ 		left mouse click	left mouse click	left mouse click	left mouse click
FN+ 		right mouse click	right mouse click	right mouse click	right mouse click
FN+ 			language input	language input	language input
FN+ 		switch touchpad on / off	switch touchpad on / off	switch touchpad on / off	switch touchpad on / off
Note:	The touchpad has no function under iOS.				

4. Function keys F1~F12 in Windows

	Windows
FN+F1	help
FN+F2	change name
FN+F3	activate search
FN+F4	open internet explorer
FN+F5	load new

FN+F6	Internet Explorer: go to address field
FN+F7	no function
FN+F8	no function
FN+F9	no function
FN+F10	activate screen lock (if existent)
FN+F11	zoom in
FN+F12	no function

5. Further functions

	iOS	Mac OS	Android	Windows	TV
choose all	 + A	 + A	Ctrl + A	Ctrl + A	Ctrl + A
copy	 + C	 + C	Ctrl + C	Ctrl + C	Ctrl + C
cut	 + X	 + X	Ctrl + X	Ctrl + X	Ctrl + X
paste	 + V	 + V	Ctrl + V	Ctrl + V	Ctrl + V
undo	 + Z	 + Z	Ctrl + Z	Ctrl + Z	Ctrl + Z
Note:	   Special keys Mac OS X / iOS				