

**User's Manual**  
**Bluetooth Speaker with radio and MP3 player**



Product number: EP18101, EP18102

## **Thank you for purchasing the Bluetooth Speaker from LEICKE.**

We hold several brands to produce and distribute our products: LEICKE (power adapters, batteries), KanaaN (adapters/converters, charging cables etc.), Sharon (iPad cases with keyboard, fans etc.), Hebron (protective cases, docking stations, screen protectors etc.), Manna (cases for tablets and smartphones).

We continuously work on the development of our products, our customer support and innovations. Our products have a long service life, are eco-friendly and high performing. Furthermore, every day we do our very best to satisfy you as our customer. That is why you, no matter if private or business customer, are in the focus of our company's efforts. We take your reviews and proposals seriously and evaluate them continuously. That way, we get to know you and your demands on our products and services better and thus allow for positive enhancements.

To discover more about LEICKE products or if you have any questions about this product, visit our website [www.leicke.com](http://www.leicke.com).

Dear customer,

*Thank you for buying a LEICKE product! This speaker not only plays music from your smartphone or tablet or MP3 from a micro SD card, but you can also use the radio function. Being switched to Bluetooth mode the speaker and its integrated microphone can be used for hands-free calls. The integrated battery allows a playtime of up to 8 hours. To get to know your device better, please read the following instructions carefully before using it the first time.*

Your LEICKE Team!

## PACKAGE CONTENTS

Before attempting to use this device, please check the packaging and make sure the following items are contained in the package:

Number of Pieces	Name	Note
1	Bluetooth speaker	Integrated battery
1	Charging cable (radio antenna)	micro USB
1	User's Manual	-

## TECHNICAL DETAILS

Bluetooth-Version	3.0, up to 8m range
capacity of integrated battery	1200 mAh
Power supply	5V / 1A
Maximum output	5 Watt
Maximum play time	6-8h, depending on volume and genre
Supported audio formats	MP3
Supported memory cards	TF / MicroSD up to 32Gbyte
Power supply	USB 5V / 1A
Size (LxWxH)	66x66x81 mm
Weight	276 g

## GETTING STARTED

**Step 1:** To switch the device on press the multi-functional button (MFB) for about 2 seconds until the control LED flashes and an acoustic signal can be heard.

**Step 2:** After switching on the device will be in Bluetooth mode. Now pair it with your smartphone or tablet. If a memory card is inserted, the speaker

automatically switches to MP3 player mode. Pressing the MFB two times will switch the device to radio mode.

**Step 3:** Volume is controlled by long pressing the forward (up) or backward (down) button for more than 2 seconds.

**Step 4:** Short press the forward and backward button to switch songs or radio channels depending on the mode the device is in.

**Step 5:** Incoming phone calls can be taken by short pressing the MFB. The calls can also be ended by pressing the MFB. The integrated microphone enables the speaker for hands-free calls.

**Step 6:** Switch the device off by long pressing the MFB button.

**Note:** Before attempting to use the device for the first time, please charge the battery for at least two hours. Like this the maximum life span will be ensured.

## ESTABLISHING THE BLUETOOTH CONNECTION

**Step 1:** Switch the music box on. To use the Bluetooth function, NO memory card must be used.

**Step 2:** Open the settings menu of your device and look for the Bluetooth option. This must be activated. In the list of the found devices you will now find "LEICKE EP18101" or "LEICKE EP18102". Connect. If a code is to be entered, please enter "0000".

**Step 3:** Now the speaker is ready for use. Pairing will be saved and available when switching on the device the next time.

## **MP3 player**

The MP3 function is activated by inserting a memory card. To switch between songs short press the forward or backward buttons. Adjust volume by long pressing the forward and backward buttons. Please keep in mind, that Bluetooth is not available while a memory card is inserted.

## **Radio**

Before using the radio function, connect the charging cable to the speaker. The speaker must be switched off and the other end of the cable must not be connected to anything! It will work as antenna. Switch on the speaker and activate radio function by double pressing the MFB. Station scanning will be activated by pressing the forward and backward button simultaneously. The scan is finished when the channels stop changing automatically. To change the channel short press forward or backward. Adjust volume by long pressing the forward and backward buttons.

To switch back to Bluetooth mode double press the MFB.



## **Hands-free function**

Receive and finish incoming calls by short pressing the MFB. The integrated microphone will be activated automatically.

## **Charging the integrated battery**

When the battery is low (about 10 minutes run time left) the speaker alerts acoustically. In this case charge the speaker as soon as possible. Use a 5 V 1 A USB power supply to charge. Higher voltage may damage speaker and power supply. The red indicator light will stay on when the speaker is charging. Once it has finished charging the indicator light will go out.

## CONTROL ELEMENTS

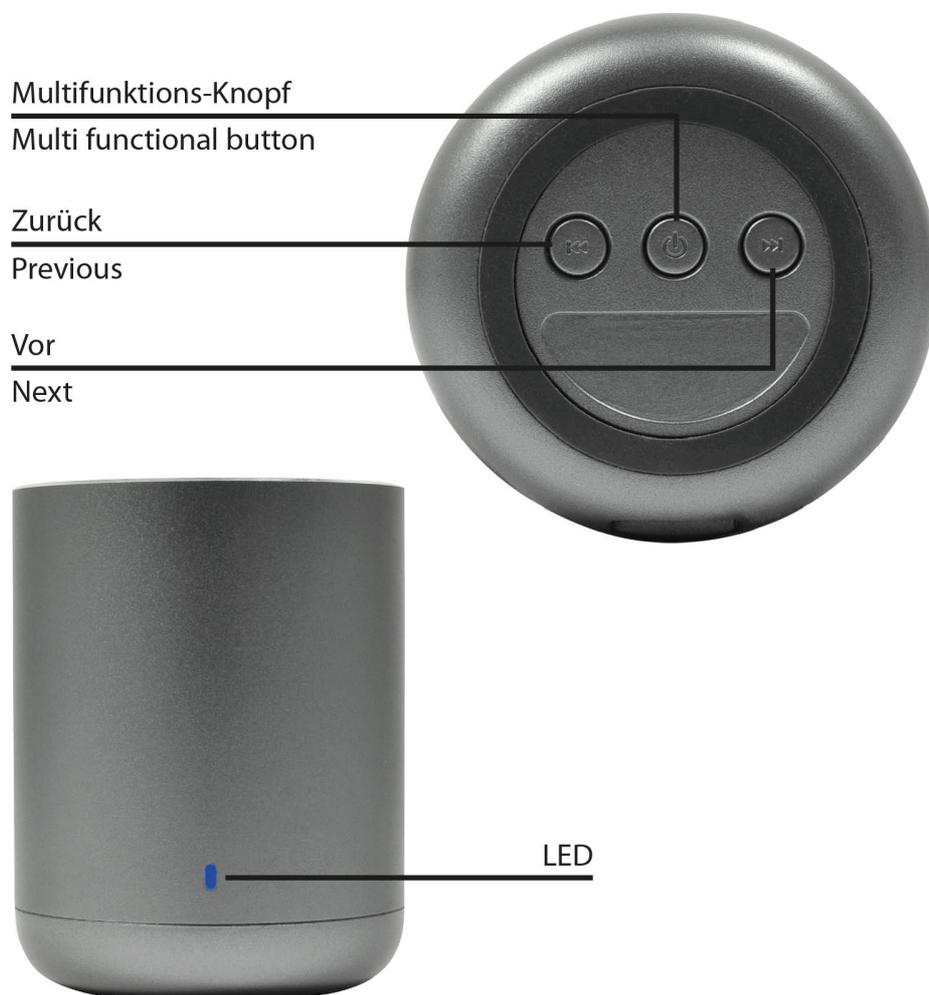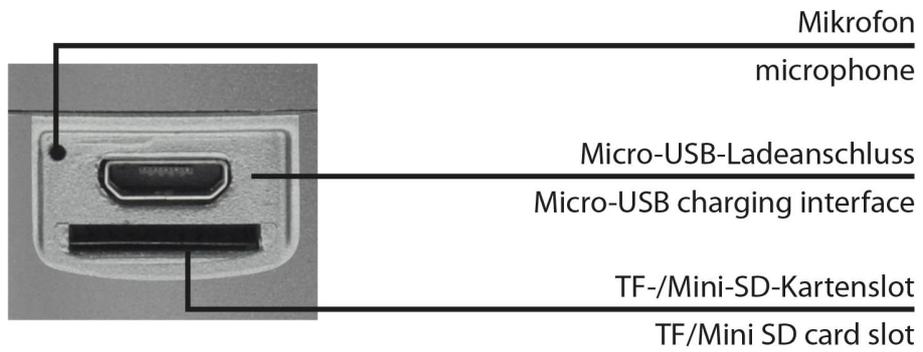

## TROUBLE SHOOTING

First check if the speaker is charged and switched on.

Problem	Possible Cause/Possible Solution
Playing via Bluetooth not possible	<ul style="list-style-type: none"><li>• Is pairing with your device successfully completed?</li><li>• Try to connect again by switching off and on again.</li><li>• Check if speaker is in radio mode.</li><li>• Check if speaker is in range of your device.</li><li>• Is volume high enough.</li></ul>
No playback from micro SD / TF card	<ul style="list-style-type: none"><li>• Are there music files saved on the card.</li><li>• Try going to the next song by short pressing the forward button.</li><li>• Is the memory card intact?</li></ul>
No playback from radio	<ul style="list-style-type: none"><li>• Is the reception disturbed? Try switching the channel with backward or forward.</li></ul>

**Our customer's support will be glad to help you under [info@leicke.com](mailto:info@leicke.com).**

## SAFETY NOTES

For your own safety and for long enjoyment of our product, please follow the following safety instructions:

- Please use device as described in the manual.
- To protect your hearing and widen the life span of the speaker maximum volume should not be adjusted over a longer period of time.
- Use 5V /1 A power supplies only. The connection of power supplies with higher voltage leads to irreparable damage.
- Please keep power adapter and speaker dry and use in dry environment only. Do not touch with wet hands.
- Keep away from damp, high temperature, dusty, erosive and oxidative environment.
- Keep safe from being hit or falling down.
- Turn off power when device is not in use for a longer time.
- Do not open cover and do not touch inner parts.

## FCC Interference Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules.

These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one of the following measures: - Reorient or relocate the receiving antenna. - Increase the separation between the equipment and receiver. - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. - Consult the dealer or an experienced radio/TV technician for help.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following conditions:

1. This device may not cause harmful interference, and
2. this device must accept any interference received, including interference that may cause undesired operation.

FCC-Caution: Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.


### IMPORTANT NOTE:

#### Radiation Exposure Statement:

1. This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. End users should follow the specific instructions in the user's manual to comply with the FCC rules.
2. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

## DISPOSAL

This device contains materials that must not be disposed of as household waste. Please check local laws concerning the applicable disposal regulations. Protect the environment by participating in recycling programs.

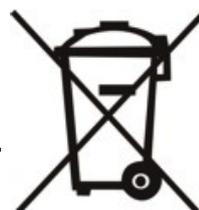

## Declaration of Conformity

LEICKE GmbH herewith declares that the device complies with the RED 2014/53/EU und ROHS 2011/65/EG regulations. The declaration of conformity can be found at [www.leicke.com](http://www.leicke.com). Go to the product you bought and look at downloads.

## CONTACT

**If you have any questions, please feel free to contact us.**

### PRODUCTION & WHOLESALE

**LEICKE GmbH**

Dohnanyistr. 28

04103 Leipzig

Germany

**Web: [www.leicke.com](http://www.leicke.com)**

**Mail: [info@leicke.com](mailto:info@leicke.com)**

