



Manual

Bluetooth Speaker DJ Roxxx Shower



Product number: **EP18141**

PACKAGE CONTENTS

Before attempting to use this device, please check the packaging and make sure the following items are contained in the package:

Number of Pieces	Name	Note
1	Bluetooth speaker	integrated battery
1	charging cable	-
1	carabiner	-
1	user's manual	-

TECHNICAL DETAILS

Frequency	100Hz-20KHz
Output	5 Watt
Supported audio format	MP3
SD / TF card	up to 16GB
Sensitivity	83dB +-2dB
Bluetooth version	4.1+EDR
Bluetooth transmission range	≤ 10m
Bluetooth usage current	< 30mA
Bluetooth stand-by current	< 15mA
Bluetooth transmission frequency	2.4GHz-2.480GHz
Bluetooth frequency band	UHF
Bluetooth transmission rate	24Mbps
Max. transmission	2.51 mW
Stand-by usage	Up to 40 h
Charging voltage	DC 5V / 100mA
Battery capacity	400 mAh
Working temperature	-10~60°C

FM	87,5-108MHz
Max. playtime	Up to 5 h
Size, Weight	90mm*90mm*50mm, 155g

! Note:

- Please charge the battery for about 10 hours with the enclosed power supply before the first use. This will ensure maximum battery life.
- Only use charging cables provided for this purpose.

COMPATIBILITY

Compatible with iPhones, tablets, smartphones, PCs, game consoles etc., which have Bluetooth or AUX output.

BLUETOOTH PAIRING

Step 1: Switch on the speaker. To use the Bluetooth function, **no** memory card must be inserted in the speaker. Either use NFC or proceed with step 2.

Step 2: Open your phone's settings and locate the Bluetooth option. It must be enabled. The list of found devices should now contain a device with the name "LEICKE EP18141". Connect your phone to it. If a code is requested, you can enter "0000".

Step 3: The speaker is now connected. The pairing will be saved for future usage.

Step 4: The music is selected via the connected device, the volume as well as the forward and backward switching between the songs can be done via the loudspeaker (see Functions and Controls).

SD CARD MODE (MP3 PLAYER)

The MP3 player function is activated by inserting a memory card. Long press the Mode button to switch to another mode. Also see Functions and Controls.

RADIO

Before switching on the speaker and using the radio function, please plug in the charging cable with the other end of the cable free. It works as an antenna. After switching on, press the Mode button long press to switch to radio mode. You can activate the automatic station search via the on/off switch. Also see Functions and Controls.

AUX MODE

When you connect an audio cable via the AUX input, the speaker plays the audio signal

from the connected source. In this case, the operation is carried out exclusively via the connected device and not via the loudspeaker.

HANDS-FREE CALL

Take a call using the LED/call button. If you want to end the call, briefly press the LED/call button again. To dial the last number you called, press and hold the LED/call button. To reject the call, press and hold the LED/call button.

VOICE ASSISTANT

Briefly press the voice assistant button to activate Siri or Google Assistant.

SURROUND SOUND

Switch on both speakers and then press the power button twice on both. You will hear two beeps. Both speakers are now successfully connected.


To disconnect the speakers. Turn on any speaker and press the power button twice again. If you were successful, you will hear a voice.

CHARGING

Connect the device with the charging cable to a USB port. While charging the LED will glow. It stops glowing when charging is completed. Turn off the speaker when not using it to ensure maximum battery life.

Note: Switch off the speaker during charging to ensure maximum charging results.

FUNCTIONS AND CONTROLS

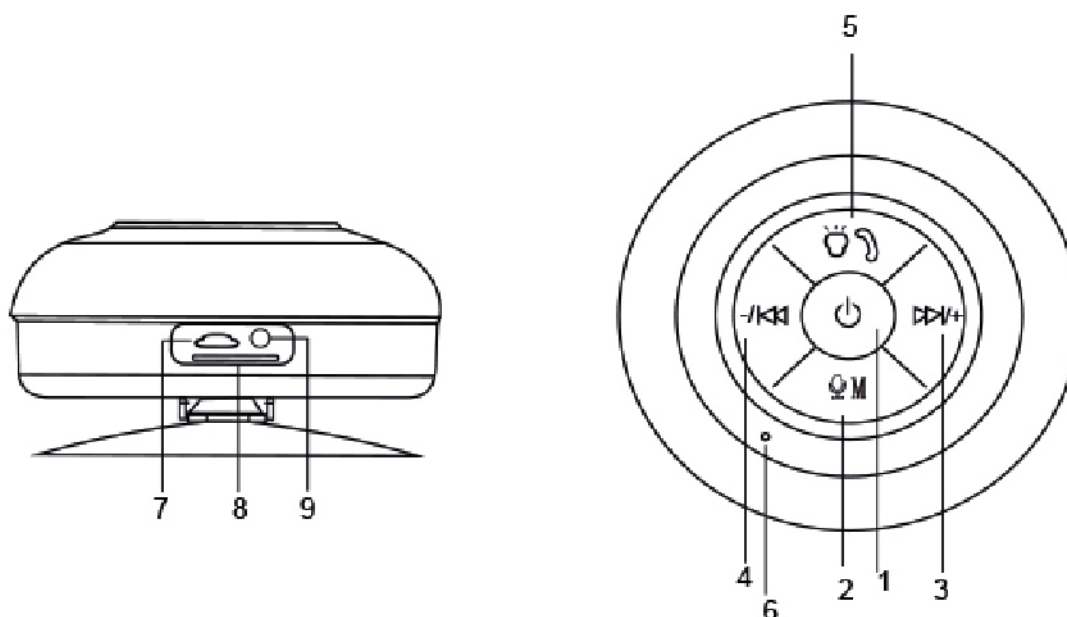

1. Power button:

- Long press - On/Off button
- Short press - play/pause/automatic channel search

2. Mode and voice assistant button:

- Short press - voice assistant of Bluetooth mode activate
- Long press - change mode

3. Long press - increase volume

- Short press - next track

4. Long press - decrease volume

- Short press - previous track

5. Call and LED light button:

- Long press - call last number/ reject call
- Short press - answer call/ hang up / LED light on/color change

6. Microphone

7. USB charging port

8. SD card slot

9. AUX in cable connection interface

TROUBLE SHOOTING

First check if the speaker is charged and switched on.

Problem	Possible Cause/Possible Solution
Playing via Bluetooth not possible	<ul style="list-style-type: none">• Is pairing with your device successfully completed?• Try to connect again by switching off and on.• Check if the speaker is in radio mode.• Check if the speaker is in range of your device.• If the volume is set sufficiently high.
No playback from Micro SD / TF card	<ul style="list-style-type: none">• Are there music files in MP3 format on the memory card?.• Try going to the next song by long pressing the forward button.• Is the memory card intact?
No playback from radio	<ul style="list-style-type: none">• Is the reception disturbed? Switch to one of their stations by pressing the Forward and Back buttons.
Is the device charged? Restarting the speaker may also help with all troubles.	

Our customer support will be glad to help you at info@leicke.com.

SAFETY NOTES

For your own safety and so that you can enjoy our product for a long time, please observe the following safety instructions:

- Please use device as described in the manual.
- To protect your hearing and and preserve the life of your speaker, maximum volume should not be adjusted over a longer period of time.
- Use 5V /1A power supplies only. The connection of power supplies with higher voltage leads to irreparable damage.
- Keep away from damp, high temperature, dusty, erosive and oxidative environment.
- Keep safe from being hit or falling down.
- Turn off power when the device is not in use for a longer time.
- Do not open cover and do not touch inner parts.

FCC INTERFERENCE STATEMENT

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules.

These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one of the following measures: - Reorient or relocate the receiving antenna. - Increase the separation between the equipment and receiver. - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. - Consult the dealer or an experienced radio/TV technician for help.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following conditions:

1. This device may not cause harmful interference, and
2. this device must accept any interference received, including interference that may cause undesired operation.

FCC Caution: Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

IMPORTANT NOTE:

Radiation Exposure Statement:

1. This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. End users should follow the specific instructions in the user's manual to comply with the FCC rules.
- This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

DISPOSAL

This device contains materials that must not be disposed of as household waste. Please check local laws concerning the applicable disposal regulations. Protect the environment by participating in recycling programs.



DECLARATION OF CONFORMITY

LEICKE GmbH herewith declares that the device complies with the RED 2014/53/EU and Rohs 2011/65/EU regulations. The declaration of conformity can be found at www.leicke.com. Go to the product you bought and look at downloads.

Contact

**You can find our manual on our Website.
Go to the product you bought and look at downloads.
If you have any questions, please feel free to contact us.**

PRODUCTION & WHOLESALE

LEICKE GmbH
Dohnanyistr. 28
04103 Leipzig
Germany

**Web: www.leicke.com
Mail: info@leicke.com**

