SPECIAL KEYS

Our keyboards have special keys which enable you to quickly access frequently used functions under Android. The following summary contains the most important keys. With our keyboards, you can access a special function by simultaneously pressing the respective function key (F1, F2, etc.) and the Fn key.

Edi	Editing keys		
	Cut the selected text		
	Copy the selected text		
	Past the copled or cut text		
System Function Keys			
	Previous track		
M	Play/Pause		
DD	Next track		
А	Mute		
Ą	Volume Down		
⊈ »)	Volume Up		
System Function Keys			
	Home Button		
Q	Search Key		
-;-;-;-	Brightness Decay		
-À-	Brightness enhancing		

The detachable keyboard for Android tablets has a different layout. Please find key assignments in the following summary.

Models: SI54135, SI54123

	Home: Exit applications and access the homescreen. This key replaces the ESC key. Alternative: Press the Fn key in combination with the function key F1 .
(KIN)	Special function: The function of this key depends on the producer of the tablet. Alternative: Press the Fn key in combination with the function key F2 .
	Browser: Launches the browser that is pre-installed on the tablet. Alternative: Press the Fn key in combination with the function key F3 .
()	E-mail: This key launches the pre-installed mail program. Alternative: Press the Fn key in combination with the function key F4 .
	Reduce Brightness: This key reduces the brightness of the display. Alternative: Press the Fn key in combination with the function key F5 .
	Increase Brightness: This key increases the brightness of the display. Alternative: Press the Fn key in combination with the function key F6 .
Q	Search: This key calls up the search mask of your tablet with which you can search for files or websites.Alternative: Press the Fn key in combination with the function key F7.
	Rewind: This key is especially used for playing media. You can call up the previous song. Alternative: Press the Fn key in combination with the function key F8 .
	 Play/Pause: This key is used for playing music and films. Music can also be played in the background. Alternative: Press the Fn key in combination with the function key F9.
	Forward: This key is especially used for playing media. You can call up the next song. Alternative: Press the Fn key in combination with the function key F10 .
	Mute: This key activates and deactivates the output of audio. Alternative: Press the Fn key in combination with the function key F11 .

	Turn down volume: This key turns down the volume. Alternative: Press the Fn key in combination with the function key F12 .
D +	Turn up volume: This key turns up the volume.
	App overview: This key calls up the overview page of all apps installed if your tablet supports this function.
	Context menu: This key calls up the context menu (similar to right-click).
Ś	Standby: Turns your tablet on and off. Sets your tablet in standby mode. If bluetooth is enabled, your tablet can be turned on via the keyboard.
	On-screen keyboard: This key calls up the on-screen keyboard if your tablet supports this function.
Fo	Function key: This key is used to access alternative key assignments. Press and hold the Fn key and simultaneously press the key with alternative function.
	Android special functions: Some producers of tablets assign this key in the operating system with different functions.
	Minimise apps: This key enables you to minimise your apps if supported by the operating system.